

## Setting up Playground

1. Connect Playground to your TV  
HDMI cable included.
2. Plug Playground into power  
Check the box for the power cord.
3. Follow the on screen instructions.  
Don't forget to switch the input on you TV.

## Playground Tips

- Make sure you space is well lit (but avoid strong light behind or above while you play.)
- Avoid wearing clothes with patterns (or clothes that match the color of you walls.)
- Clear your area of furniture (and pets!)
- Try keeping the camera view free of crowds (in case Playground has trouble tracking you.)
- Put Playground centered directly under your TV.
- Put Playground close to the edge (so the camera can see as much as possible.)
- Make sure your TV's game mode setting is on (to avoid lag.)

## Using Playground

Want some privacy insurance?

Use the included magnetic camera cover to give you peace of mind.

Want to put Playground to sleep?

Press and hold "Home" for 5 seconds.

Make sure to only use the included power cord.

Using unsupported power cords can harm Playground.

Need some more help?

Go to: [www.nex.fun/help](http://www.nex.fun/help)

Privacy, terms and warranty information can be found here:

[www.nex.inc/playground/legal/privacy](http://www.nex.inc/playground/legal/privacy)

[www.nex.inc/playground/legal/terms](http://www.nex.inc/playground/legal/terms)

[www.nex.inc/playground/legal/warranty](http://www.nex.inc/playground/legal/warranty)